

seating



Chair Functions

Back Height Adjustment

Integrated ratchet system – lift the back up with a number of clicks for position height. To lower, lift to the very top height option and then it will lower back down to the bottom.

Seat height

The 1st lever found underneath on the right of the seat when seated.

Upwards movement: lift to raise the seat (without weight on seat).
Downwards movement: Lift to lower seat (with weight on seat).

Back angle adjustment

2nd lever on the right underneath the seat

Push down to activate and lean against back cushion to adjust, then lift lever to lock in required position. If left unlocked (down) there is also a free float mode.



Arm Rest Options

1D – Adjust arm height up and down (press down button to move, release to lock)
2D – As above, but with additional pad adjustment (moves in and out with button lock)

Seat tilt and back tilt

Elegant adjustment with one movement for both – push button to unlock and use body weight to adjust, push button to lock.

Seat angle adjustment

The left hand lever underneath the seat

Adjust seat angle by pushing lever down to unlock and use weight to adjust. When happy with position lift lever up to lock into position.



Back Adjustment



Back Height Adjust



Locking Tilt Lock



Synchro Tilt



Sliding Seat



Arm Adjustment 1D



Arm Adjustment 2D

ds | **ergonomics**
ds-ergonomics.com

CREATING EFFECTIVE WORKING ENVIRONMENTS

